



H-22 (For POLYESTER CORD STRAP SIZE TO 19MM)


H-25 (For POLYESTER CORD STRAP SIZE TO 25MM)

H-26 (For POLYESTER CORD STRAP SIZE TO 40MM)

OPERATION INSTRUCTIONS

&

SPARE PARTS LIST

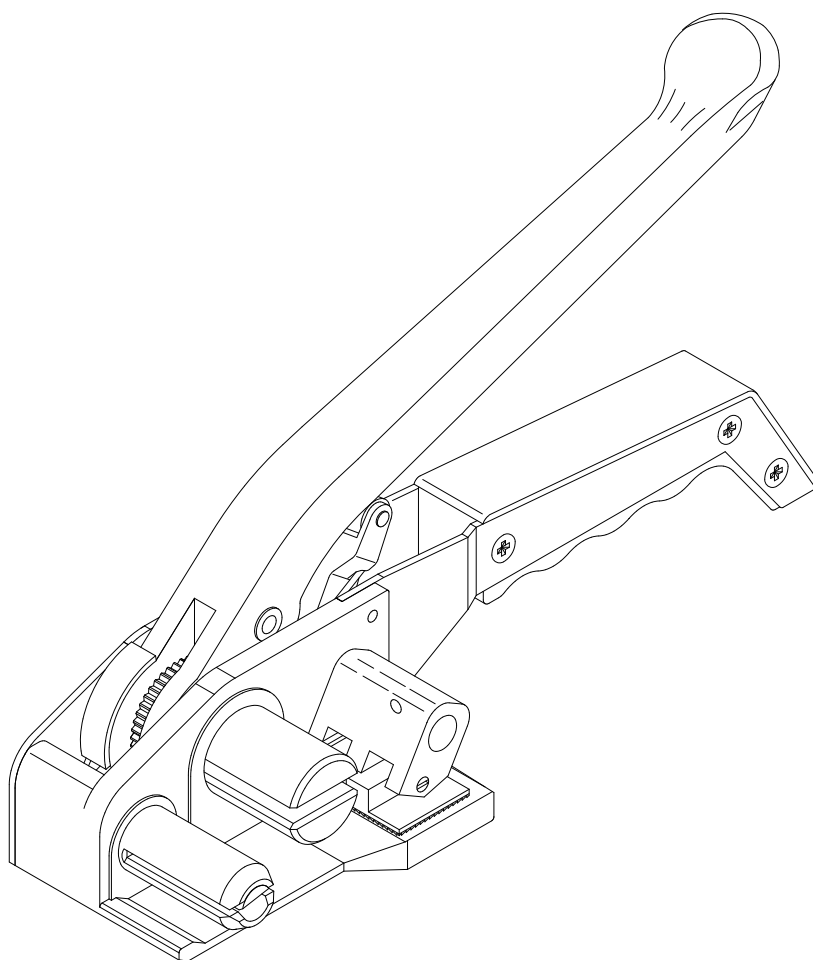


OPERATION INSTRUCTIONS

- 1./ 2. Put strap around the package. Insert strap into the buckle and tighten strap by hand.

3. Take the tensioner by the right hand and depress tension lever. Place strap under the gripper so that it touches the housing with the right hand edge. Release tension lever.

4. Insert the upper strap into the slot of the cutter mechanism and the windlass. Hold the tool and strap with your left hand and move the tension lever forth and back until the strap is tensioned.

5. Depress the tension lever from the tensioner completely until the strap is cut. Pivot the tensioner away from the strap.

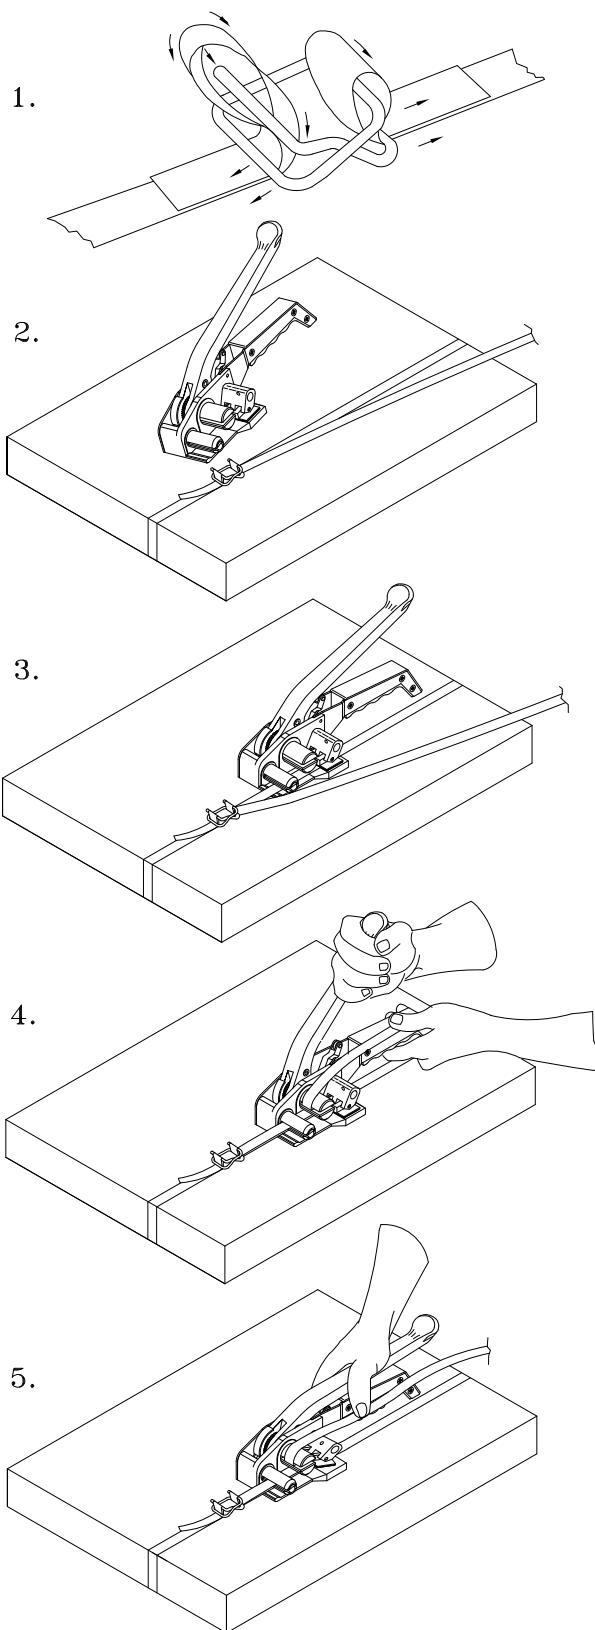

MAINTENANCE INSTRUCTIONS

- PERIODICALLY LUBRICATE ALL MOVING PARTS WITH ONE OR TWO DROPS OF LIGHT MACHINE OIL.
- CLEAN CLAMP OF ANY DIRT OR STRAP RESIDUE DAILY.

SAFETY INSTRUCTIONS







1. THIS TOOL WAS DESIGNED AND MANUFACTURED FOR SAFE HANDLING DURING THE STRAPPING OPERATION. FOR EFFECTIVE SERVICE, PLEASE READ AND FOLLOW ALL SAFETY, MAINTENANCE AND OPERATING INSTRUCTIONS.
2. ALWAYS WEAR EYE, FACE, AND HAND PROTECTION WHEN OPERATING THIS TOOL.
3. DO NOT PUT HANDS OR OTHER PARTS OF THE BODY BETWEEN THE STRAP AND THE PACKAGE.
4. WHEN CUTTING THE STRAP, HOLD THE UPPER PORTION AND STAND AT A SAFE DISTANCE AWAY FROM THE STRAP. EXERT CAUTION, AS THE LOWER STRAP WILL SNAP FORWARD.
5. DO NOT STAND IN LINE WITH THE STRAP WHILE IT IS BEING TENSIONED. THE STRAP COULD BREAK IF OVER TENSIONED.
6. USE ONLY ORIGINAL REPLACEMENT PARTS.

ADJUSTMENTS (For H-26)

BEFORE USING YOUR NEW H-26 TOOL, PLEASE ADJUST FOR THE CORRECT THICKNESS OF STRAPPING. NOTE THAT DAMAGE COULD RESULT TO THE TOOL IF THIS INSTRUCTION IS NOT FOLLOWED.

PLACE A SAMPLE OF YOUR STRAPPING IN THE TOOL AND TENSION AROUND AN OBJECT UNTIL THE STRAP IS AT THE DESIRED TENSION LEVEL. THEN TIGHTEN HSS0510 SET SCREW UNTIL IT LIGHTLY CONTACTS THE H26-013 CLAMP ARM. REMOVE THE TOOL BY COMPLETELY PUSHING DOWN ON THE HANDLE AND WITHDRAWING TO THE RIGHT. THE TOOL IS NOW READY TO USE.


IF ANOTHER THICKNESS OF STRAP IS SUBSTITUTED, THE ABOVE ADJUSTMENTS SHOULD BE REPEATED.

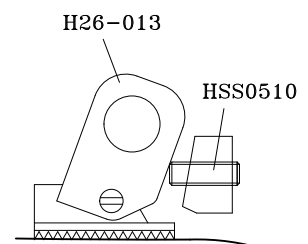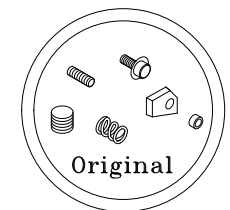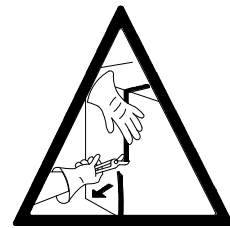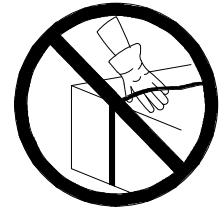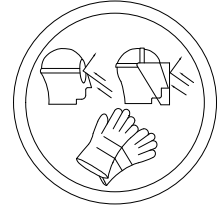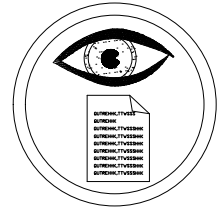

STRAPPING TENSIONER

H-22

(For Polyester Cord Strap Size to 19mm)

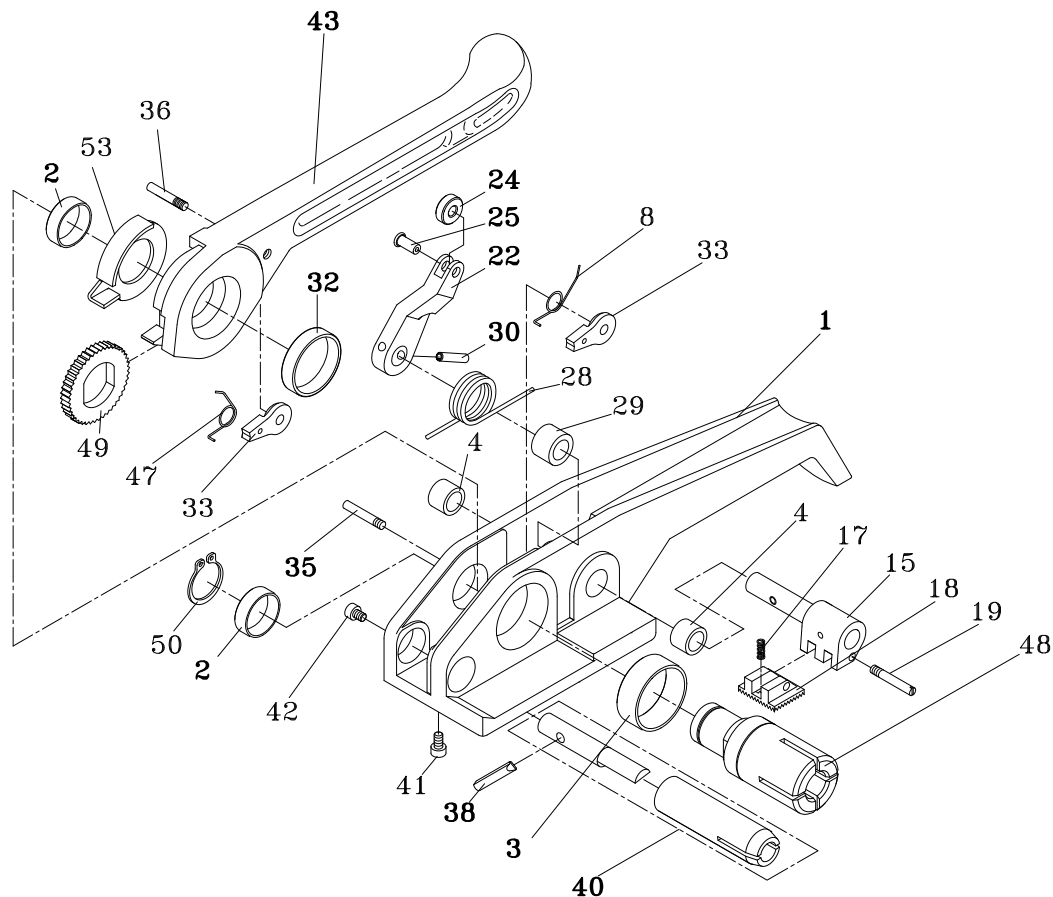


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REF. NO.	PART NO.	DESCRIPTION	Q'TY
1	H22-001	Base	1	32	H21-032	Big Bushing (Handle)	1
2	H21-002	Small Bushing	2	33	H21-033	Toggle	2
3	H21-003	Big Bushing (Base)	1	35	H21-035	Base Shaft	1
4	H21-004	Bushing	2	36	H21-036	Handle Shaft	1
8	H21-008	Base Toggle Spring	1	38	H21-038	Blade Lever	1
15	H21-015	Gripper	1	40	H22-040	Cutting Set	1
17	H21-017	Gripper Spring	1	41	HBS0408	HBS, M4x8	1
18	H22-018	Gripper Plate	1	42	HBS0406	HBS, M4x6	1
19	H21-019	Gripper Screw	1	43	H21-043	Handle	1
22	H21-022	Releasing Lever	1	47	H21-047	Handle Toggle Spring	1
24	H21-024	Releasing Lever Roller	1	48	H21-048	Windlass	1
25	H21-025	Releasing Lever Shaft	1	49	H21-049	Ratchet Wheel	1
28	H21-028	Main Spring	1	50	SR20	Stop Ring, S-20	1
29	H21-029	Main Spring Bushing	1	53	H21-053	Nose Hook	1
30	SP0420	Spring Pin, 4x20	1				

* PLEASE ORDER PARTS BY PARTS NO.,DESCRIPTION AND Q'TY.

STRAPPING TENSIONER

H-25

(For Polyester Cord Strap Size to 25mm)

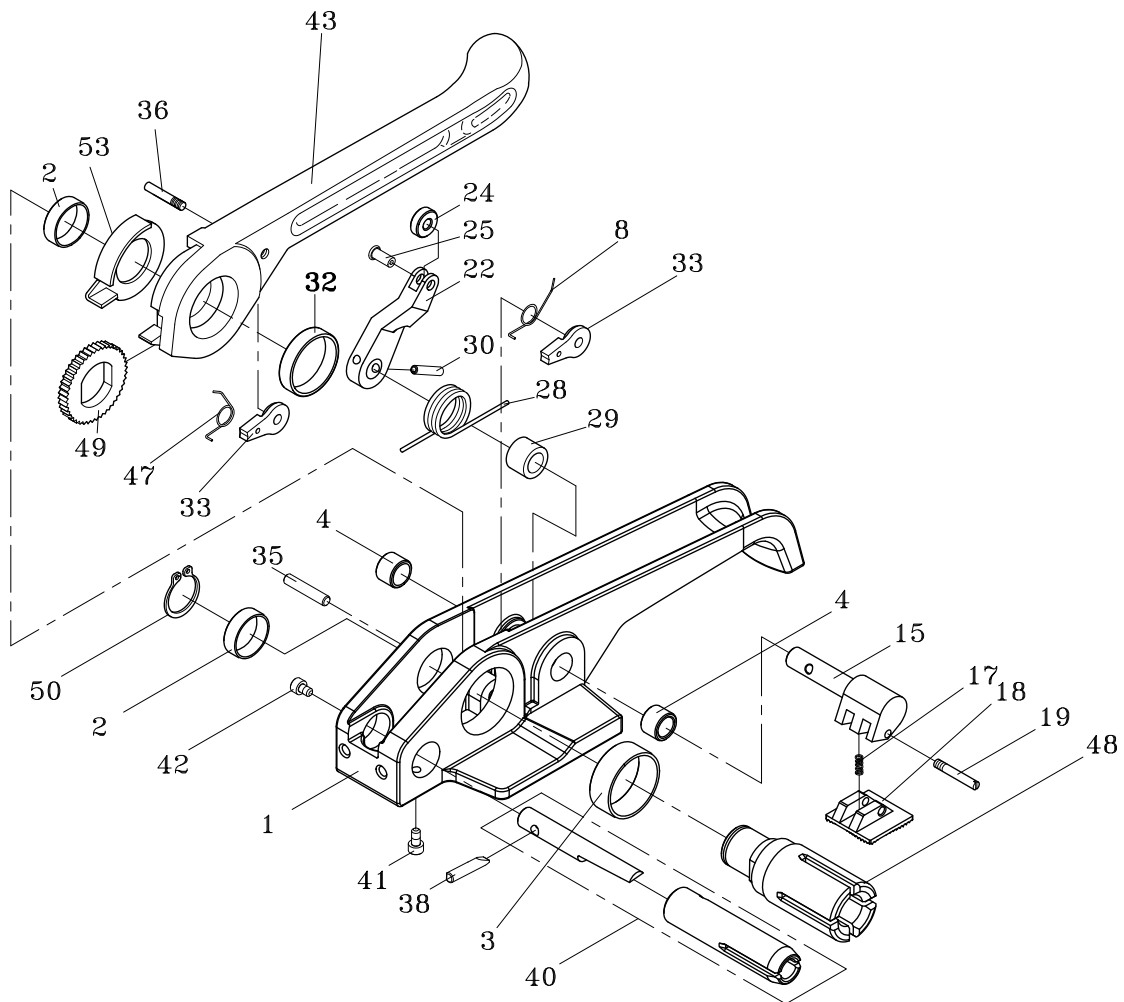

REF. NO.	PART NO.	DESCRIPTION	Q'TY
1	H25-001	Base	1
2	H21-002	Small Bushing	2
3	H21-003	Big Bushing (Base)	1
4	TAL1010	Needle Bearing, 1010	2
8	H21-008	Base Toggle Spring	1
15	H25-015	Gripper	1
17	H21-017	Gripper Spring	1
18	H25-018	Gripper Plate	1
19	H21-019	Gripper Screw	1
22	H21-022	Releasing Lever	1
24	H21-024	Releasing Lever Roller	1
25	H21-025	Releasing Lever Shaft	1
28	H21-028	Main Spring	1
29	H21-029	Main Spring Bushing	1
30	SP0420	Spring Pin, 4x20	1


REF. NO.	PART NO.	DESCRIPTION	Q'TY
32	H21-032	Big Bushing (Handle)	1
33	H21-033	Toggle	2
35	H21-035	Base Shaft	1
36	H21-036	Handle Shaft	1
38	H21-038	Blade Lever	1
40	H25-040	Cutting Set	1
41	HBS0408	HBS, M4x8	1
42	HBS0406	HBS, M4x6	1
43	H21-043	Handle	1
47	H21-047	Handle Toggle Spring	1
48	H25-048	Windlass	1
49	H21-049	Ratchet Wheel	1
50	SR20	Stop Ring, S-20	1
53	H21-053	Nose Hook	1

* PLEASE ORDER PARTS BY PARTS NO., DESCRIPTION AND Q'TY.

PARTS LIST

H-26

(For Polyester Cord Strap Size to 40mm)

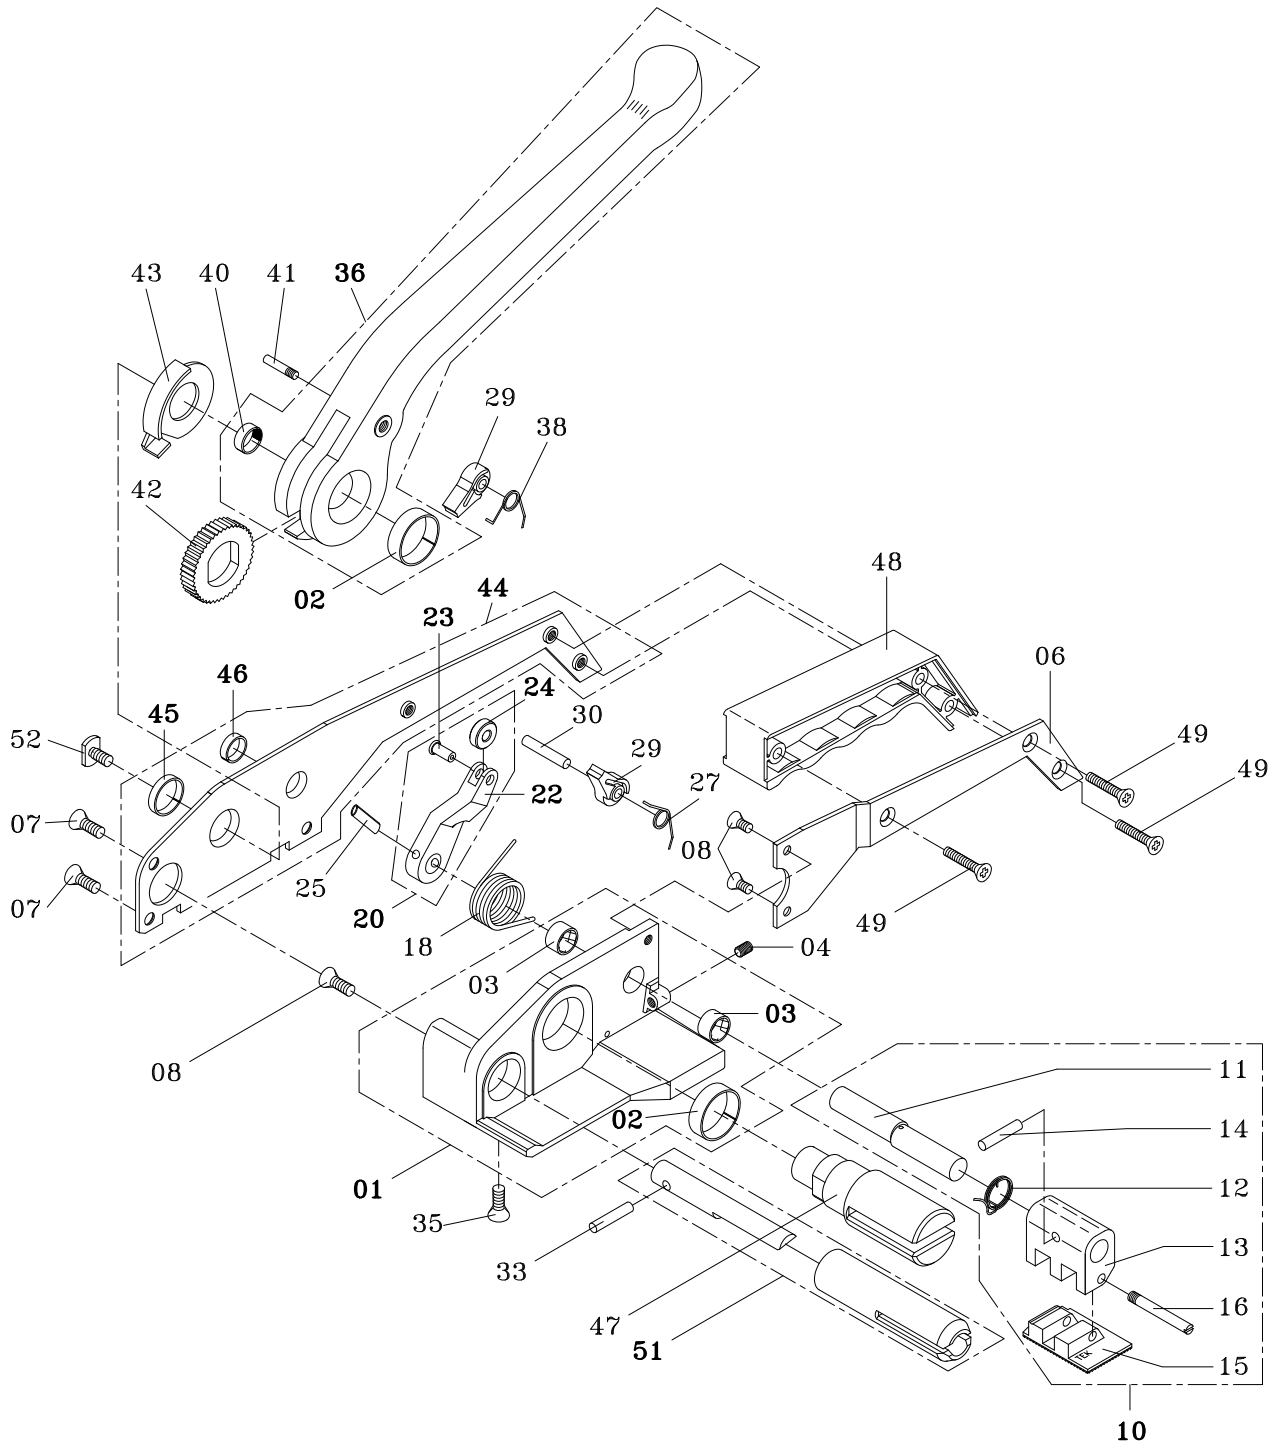

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REF. NO.	PART NO.	DESCRIPTION	Q'TY
REF. NO.	ART. NO.	ARTICLE	NOMBRE	REF. NO.	ART. NO.	ARTICLE	NOMBRE
NO. POS.	NO. BE ARTICULO	DEFINICION	NOMBRE	NO. POS.	NO. BE ARTICULO	DEFINICION	NOMBRE
1	H26-001	Housing Compl. Bati Compl. Gehause Kompl.	1	22	H21-022	Releasing Lever Bascule Wippe	1
2	MB2508	Metal Bush, 2508 Palier Lager	2	23	H21-025	Releasing Lever Shaft Rivet Niete	1
3	MB1206	Metal Bush, 1206 Palier Lager	2	24	H21-024	Releasing Lever Roller Rouleau Rolle	1
4	HSS0510	HSS, M5x10 Goujon Filetee Gewindestift	1	25	SP0420	Spring Pin, 4x20 Goupille Elastique Spiral-Spannstift	1
6	H26-006	Handle Plate Plaque A Poignee Griffplatte	1	27	H26-027	Round Spring Bottom Ressort Lame En Base Blattfeder Unten	1
7	FMS0510S	FMS, M5x10 (SUS) Vis Noyee Senkschraube	3	29	H26-029	Clamp Pawl Cliquet Klinke	2
8	FMS0508S	FMS, M5x8 (SUS) Vis Noyee Senkschraube	3	30	H26-030	Cylindric Pin Goujon Cylindrique Zylinderstift	1
10	H26-010 (PP/RC)	Clamp Compl. Cliquet Compl. Klinke Kompl.	1	33	H26-033	Activating Pin Tige De Manoeuvre Betatigungsstift	1
11	H26-011	Eccentric Shaft Arbre Excentrique Exzenterachse	1	35	FMS0515S	FMS, M5x15 (SUS) Vis Noyee Senkschraube	1
12	H26-012	Resetting Spring Ressort A Torsion Ruckstellfeder	1	36	H26-036	Lever Compl. Levier Compl. Hebel Kompl.	1
13	H26-013	Clamp Arm Bras De Cliquet Klinkenarm	1	38	H26-038	Round Spring Top Ressort Lame En Haut Blattfeder Oben	1
14	SP0416	Spring Pin, 4x16 Goupille Elastique Spiralstift	1	40	MB1810	Metal Bush, 1810 Palier De Arriere Lager Hinten	1
15	H26-015 (PP/RC)	Clamp Plate Pied De Cliquet Klinkenfuss	1	41	H26-041	Shank Screw Vis Sans Tete Schaftschraube	1
16	H26-016	Bolt Screw Vis Sans Tete Schaftschraube	1	42	H26-042	Ratchet Wheel Roue A Cliquet Klinkenrad	1
18	H26-018	Spring For Clamp Ressort De Cliquet Feder Zu Klinke	1	43	H26-043	Knife Actuator Manoeuvre Du Couteau Messer Betatigung	1
20	H26-020	Rocker Compl. Bascule Compl. Wipppe Kompl.	1	44	H26-044	Rear Plate Compl. Plaque Arriere Compl. Ruckplatte Kompl.	1

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REF. NO.	PART NO.	DESCRIPTION	Q'TY
REF. NO.	ART. NO.	ARTICLE	NOMBRE	REF. NO.	ART. NO.	ARTICLE	NOMBRE
NO. POS.	NO. BE ARTICULO	DEFINICION	NOMBRE	NO. POS.	NO. BE ARTICULO	DEFINICION	NOMBRE
45	MB1804	Metal Bush, 1804 Palier Lager	1				
46	MB1204	Metal Bush, 1204 Palier Lager	1				
47	H26-047	Windlass Arbre De Serrage Anzugswelle	1				
48	H26-048	Handle Poignee Griff	1				
49	FMS0530S	FMS, M5x30 (SUS) Vis Noyee Senkschraube	3				
51	H26-051	Knife Compl. Couteuau Compl. Messer Kompl.	1				
52	H26-052	Holding Screw Vis D'arretage Halteschraube	1				